 


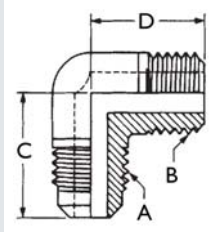


Half Union - Flare to NPTFE

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| E1-4A | A 00335 | 1/4 | 1/8 | 0.94 | 0.78 | 25 | 0.040 |
| E1-4B | A 04890 | 1/4 | 1/4 | 0.91 | 0.94 | 25 | 0.055 |
| E1-4C | A 04812 | 1/4 | 3/8 | 0.94 | 1.03 | 25 | 0.082 |
| E1-6A | A 04937 | 3/8 | 1/8 | 1.03 | 0.91 | 25 | 0.080 |
| E1-6B | A 00337 | 3/8 | 1/4 | 1.06 | 1.06 | 25 | 0.077 |
| E1-6C | A 04889 | 3/8 | 3/8 | 1.06 | 1.09 | 25 | 0.108 |
| E1-6D | A 04886 | 3/8 | 1/2 | 1.13 | 1.34 | 25 | 0.160 |
| E1-8B | A 05044 | 1/2 | 1/4 | 1.22 | 1.19 | 10 | 0.135 |
| E1-8C | A 00339 | 1/2 | 3/8 | 1.22 | 1.13 | 15 | 0.140 |
| E1-8D | A 04887 | 1/2 | 1/2 | 1.28 | 1.38 | 15 | 0.180 |
| E1-8E | A 05072 | 1/2 | 3/4 | 1.34 | 1.38 | 10 | 0.231 |
| E1-10C | A 04856 | 5/8 | 3/8 | 1.47 | 1.25 | 10 | 0.225 |
| E1-10D | A 04538 | 5/8 | 1/2 | 1.47 | 1.44 | 10 | 0.240 |
| E1-10E | A 05054 | 5/8 | 3/4 | 1.47 | 1.50 | 10 | 0.255 |

Half Union - Flare to NPTFE



 
Union - Flare to Flare

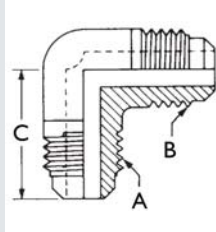


Union - Flare to Flare

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| E2-4 | A 00147 | 1/4 | 1/4 | 0.91 | | 25 | 0.074 |
| E2-6 | A 00146 | 3/8 | 3/8 | 1.06 | | 25 | 0.095 |
| E2-8 | A 00145 | 1/2 | 1/2 | 1.22 | | 15 | 0.150 |
| E2-10 | A 04539 | 5/8 | 5/8 | 1.47 | | 10 | 0.250 |

 External Flare to NPTFI

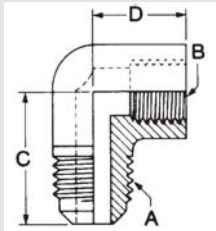

External FI to Internal FI

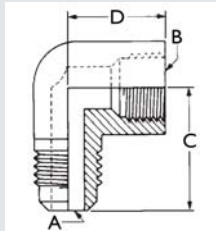 

External Flare to NPTFI

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| E3-4A | A 04630 | 1/4 | 1/8 | 0.91 | 0.91 | 25 | 0.050 |
| E3-4B | A 05007 | 1/4 | 1/4 | 1.06 | 0.66 | 25 | 0.140 |


External Flare to Internal Flare

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| E4-44 | A 04898 | * | 1/4 | 1/4 | 0.94 | 25 | 0.065 |
| E4-66 | A 08082 | * | 3/8 | 3/8 | 1.22 | 25 | 0.170 |


Half Union - Flare to Solder

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| ES2-44 | A 03449 | 1/4 | 1/4 | 0.84 | 0.36 | 25 | 0.035 |
| ES2-66 | A 03511 | 3/8 | 3/8 | 1.08 | 0.47 | 20 | 0.081 |
| ES2-88 | A 07851 | 1/2 | 1/2 | 1.22 | 0.47 | 10 | 0.120 |

 Half Union - Flare to Solder

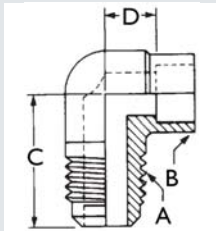

Ext FI to Int FI Swivel

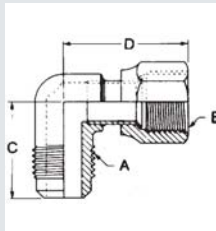 

External Flare to Internal Flare Swivel

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| ES4-44 | A 15940 | 1/4 | 1/4 | 0.91 | 1.25 | 4 | 0.103 |
| ES4-66 | A 15941 | 3/8 | 3/8 | 1.08 | 1.42 | 4 | 0.133 |
| ES4-88 | A 15943 | 1/2 | 1/2 | 1.22 | 1.53 | 4 | 0.202 |

External Flare to Internal Flare Swivel, JIS Class II

| Cat Number | Part Number | Flare A (in) | B (in) | C (in) | D (in) | Box Qty | Wt(lb) |
|------------|-------------|--------------|--------|--------|--------|---------|--------|
| | A 15940H | 1/4 | 1/4 | 0.91 | 1.25 | 4 | 0.085 |
| | A 15941H | 3/8 | 3/8 | 1.08 | 1.42 | 4 | 0.085 |
| | A 15943H | 1/2 | 1/2 | 1.25 | 1.55 | 4 | 0.085 |

* Furnished Gasket