


**Copper Flare Seal
Bonnets**

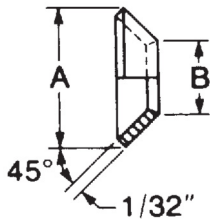

**Copper Flare
Gaskets**

Copper Flare Seal Bonnets

Cat Number	Part Number	Size Flare	A (in)	B (in)	C (in)*	Box Qty	Wt(lb)
B1-4	A 00414	1/4	0.36	0.22	0.22	100	0.001
B1-5	A 04935	5/16	0.42	0.28	0.28	50	0.004
B1-6	A 00415	3/8	0.55	0.36	0.34	100	0.005
B1-8	A 00416	1/2	0.66	0.47	0.41	100	0.005
B1-10	A 00485	5/8	0.77	0.61	0.44	20	0.008
B1-12	A 04738	3/4	0.95	0.72	0.56	25	0.015

Copper Flare Gaskets

Cat Number	Part Number	Size Flare	A (in)	B (in)	C (in)*	Box Qty	Wt(lb)
B2-4	A 00401	1/4	0.36	0.19		100	0.001
B2-6	A 00402	3/8	0.55	0.28		100	0.002
B2-8	A 00403	1/2	0.66	0.41		100	0.002
B2-10	A 05186	5/8	0.77	0.50		50	0.005
B2-12	A 04822	3/4	0.95	0.63		25	0.005

C Dimension: Copper Flare Seal Bonnet +/- 1/64, Copper Flare Gasket +/- 1/32