




**CYCLEMASTER® Quick Connect Ball Valves
INSTRUCTIONS**


ACCESS VALVE CORE
INSTALLATION TORQUE 1.5 TO 3.0 lb. in.

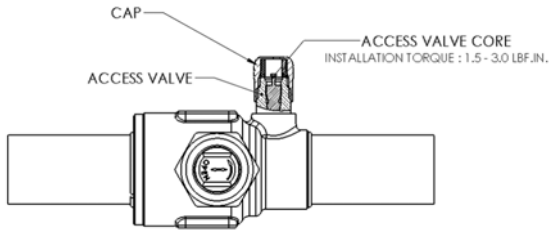


! REMOVE THE ACCESS VALVE CORE BEFORE BRAZING OR ANY SUCH HEAT OPERATION TO PROTECT THEM FROM DAMAGE DUE TO EXTREME HEAT.

FORMS: INST-028
11/15


CFC HCFC & HFC

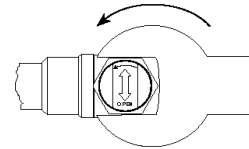


Loosen Nut

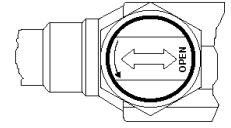


Change Stem Direction

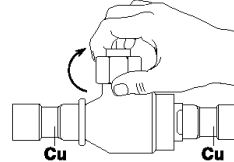

Hand Tighten

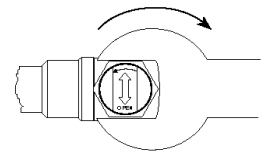

Tighten 1/4 Turn

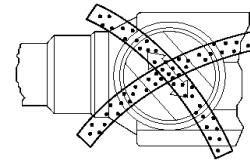


Ball Valve MUST be in FULL OPEN or FULL CLOSED POSITION

FORMS: INST-028
11/15



**CYCLEMASTER® Quick Connect Ball Valves
INSTRUCTIONS**


ACCESS VALVE CORE
INSTALLATION TORQUE 1.5 TO 3.0 lb. in.

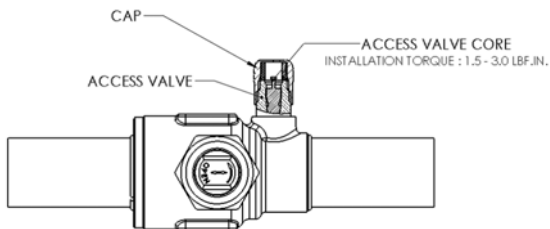


! REMOVE THE ACCESS VALVE CORE BEFORE BRAZING OR ANY SUCH HEAT OPERATION TO PROTECT THEM FROM DAMAGE DUE TO EXTREME HEAT.

FORMS: INST-028
11/15


CFC HCFC & HFC

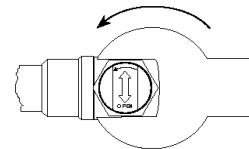


Loosen Nut

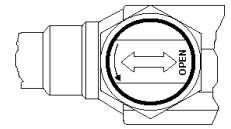


Change Stem Direction

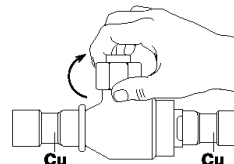

Hand Tighten

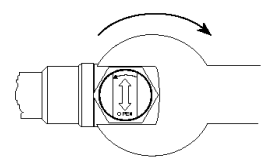

Tighten 1/4 Turn

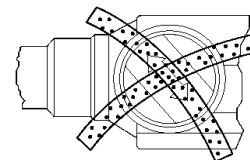

Ball Valve MUST be in FULL OPEN or FULL CLOSED POSITION

FORMS: INST-028
11/15