





3-Way Ball Valve Installation Instructions

When viewed from the top, if the stem arrow is aligned with the tubes, refrigerant flows to the side of the weld joint.

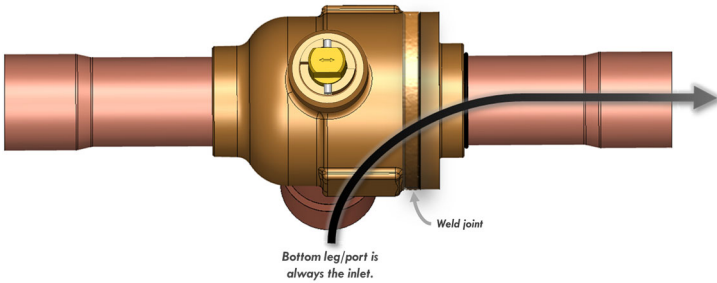

When viewed from the top, if the stem arrow points away from the tubes, refrigerant flows to the side opposite the weld joint.

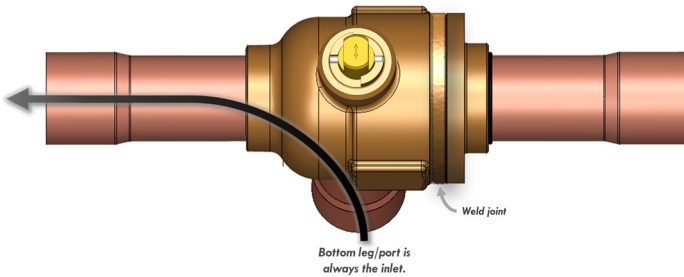

The valves are marked 'CW' (clockwise) and 'CCW' (counterclockwise), along with arrows indicating flow direction. When viewed from the side of the valve where the markings are located, turning the valve stem clockwise or counterclockwise will cause refrigerant to flow in the direction indicated by the corresponding arrow.

